



DATA RACK BUSBAR

— 250A-1250A —

THE SMARTEST WAY TO DISTRIBUTE POWER



www.dtmbusbar.com

CONTENTS

<u>General Information</u>	4
<u>Fittings</u>	
Straight lengths	6
Front Feeding Module	6
Plastic Outlet Box	7
Metal Outlet Box	8
Termination Module	11
<u>Hanger Set</u>	
Hanger Additional Closure	12
<u>Assembly Information</u>	
Additional Assembly	13
Outlet Box Installation	15

GENERAL FEATURES

The data bar is designed to meet the following requirements:
Data Centre AC up to 1000V/1250A.

High Current Density


Featuring a compact design compared to existing models, the Busbar has a carrying capacity that reduces electrical power loss from 250A to 1250A thanks to its effective heat-dissipating body profile.

Environmentally Friendly

The data bar only uses components that do not contain hazardous substances such as lead, cadmium, mercury and chromium.


Permitted Operating Temperature

The cross-sectional areas of the conductor and enclosure profile are designed to meet the standard permissible operating temperature specified in IEC 61439-1,6 or UL 857. Therefore, the temperature rise limit of the enclosure is 55K or less.

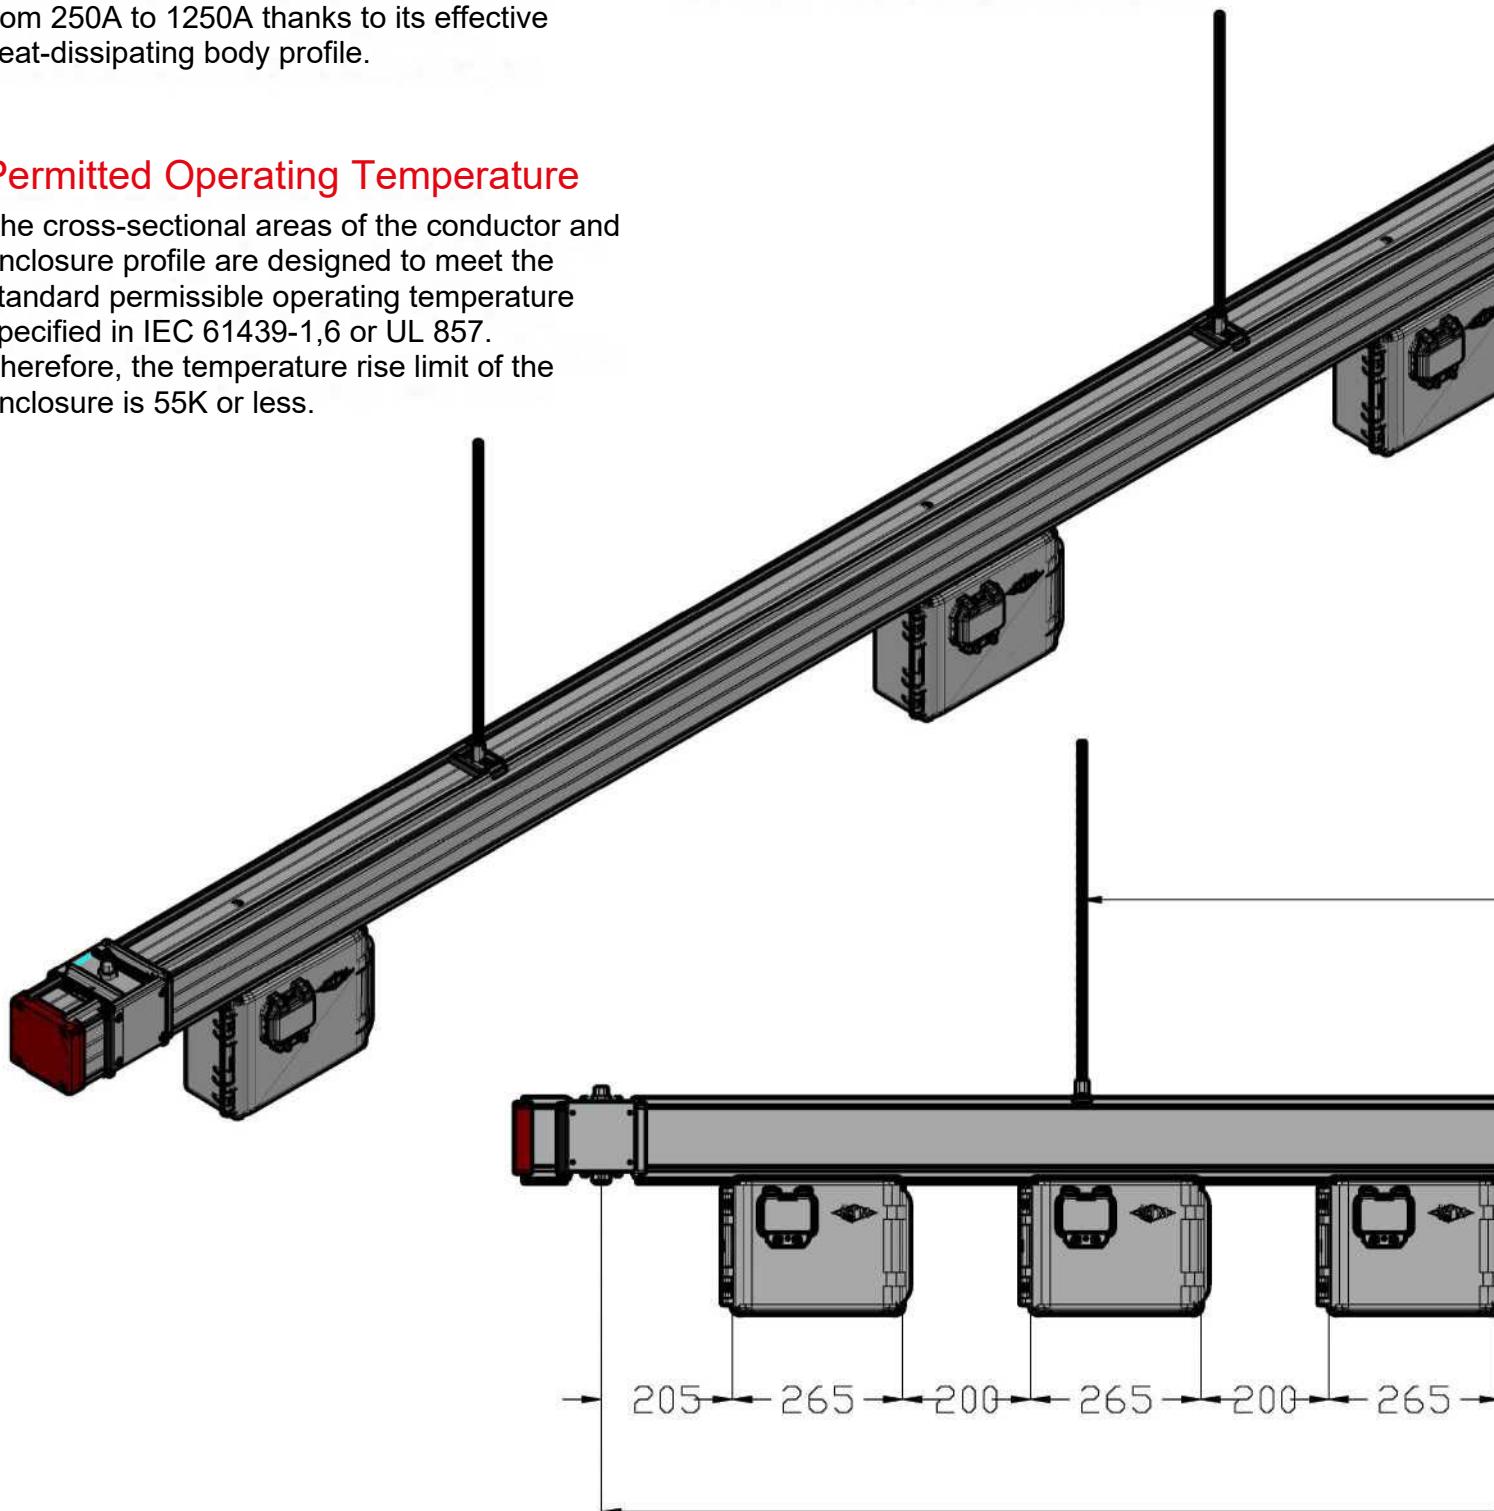

Simple Installation

Extending and removing the data bar is as simple as inserting and removing plugs.

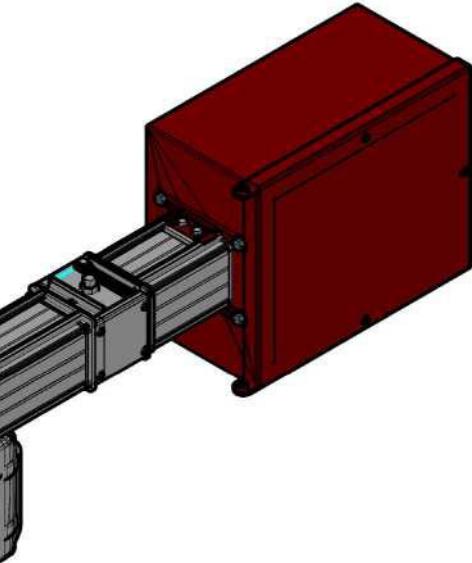

Conductors


Data-bar uses copper conductors with conductivity above 99% or aluminium conductors with conductivity above 61%. The U-shape of the conductor ensures the Data-bar achieves optimal performance and easy distribution.

Efficient Use of Space


The power monitoring system of the data bar takes up less space than cables.

Housing / Distribution


The data bar utilises an effective heat-dissipating aluminium body that produces excellent mechanical strength and heat diffusion. It offers two distribution solutions, including a plug-in type.

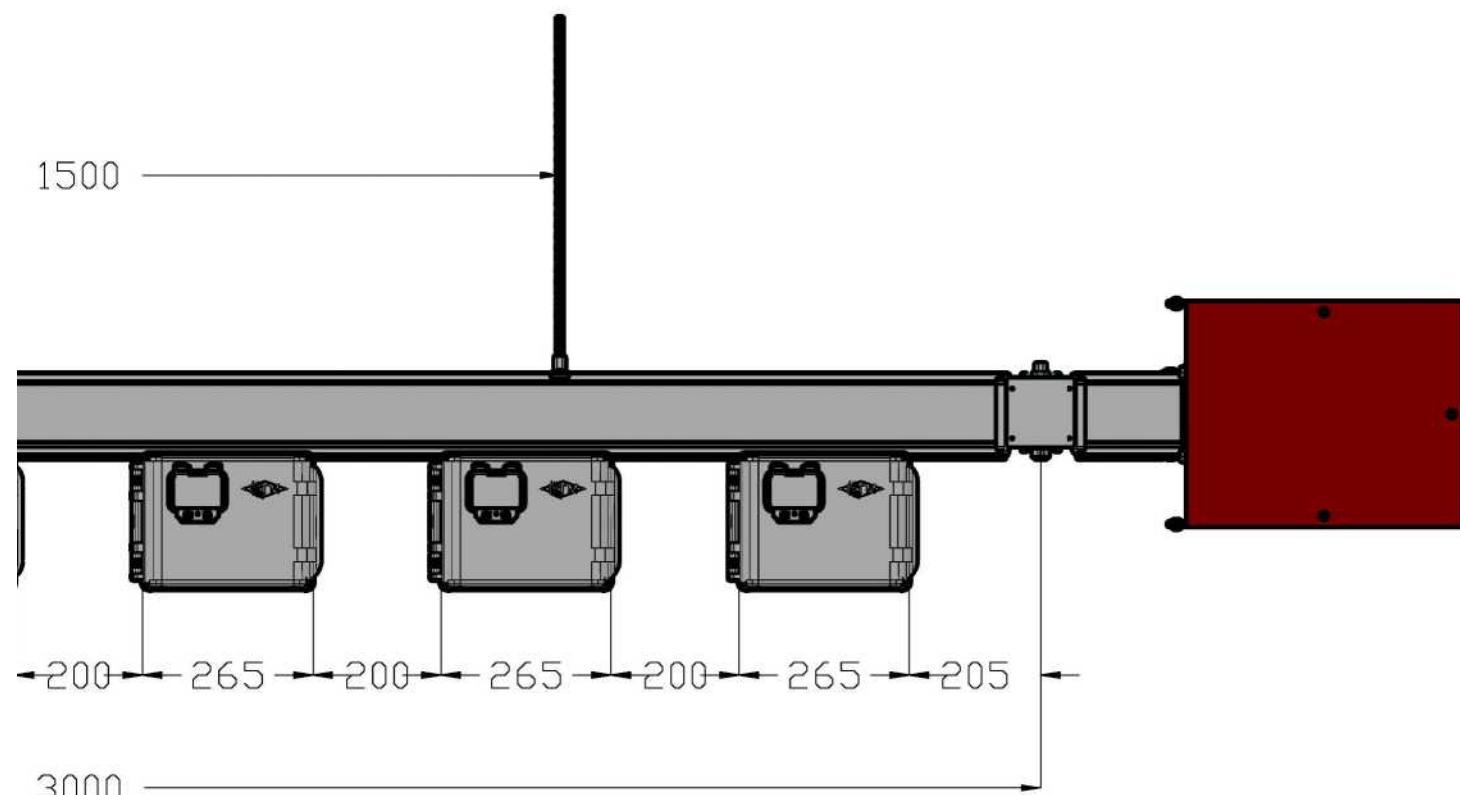

Order Code System


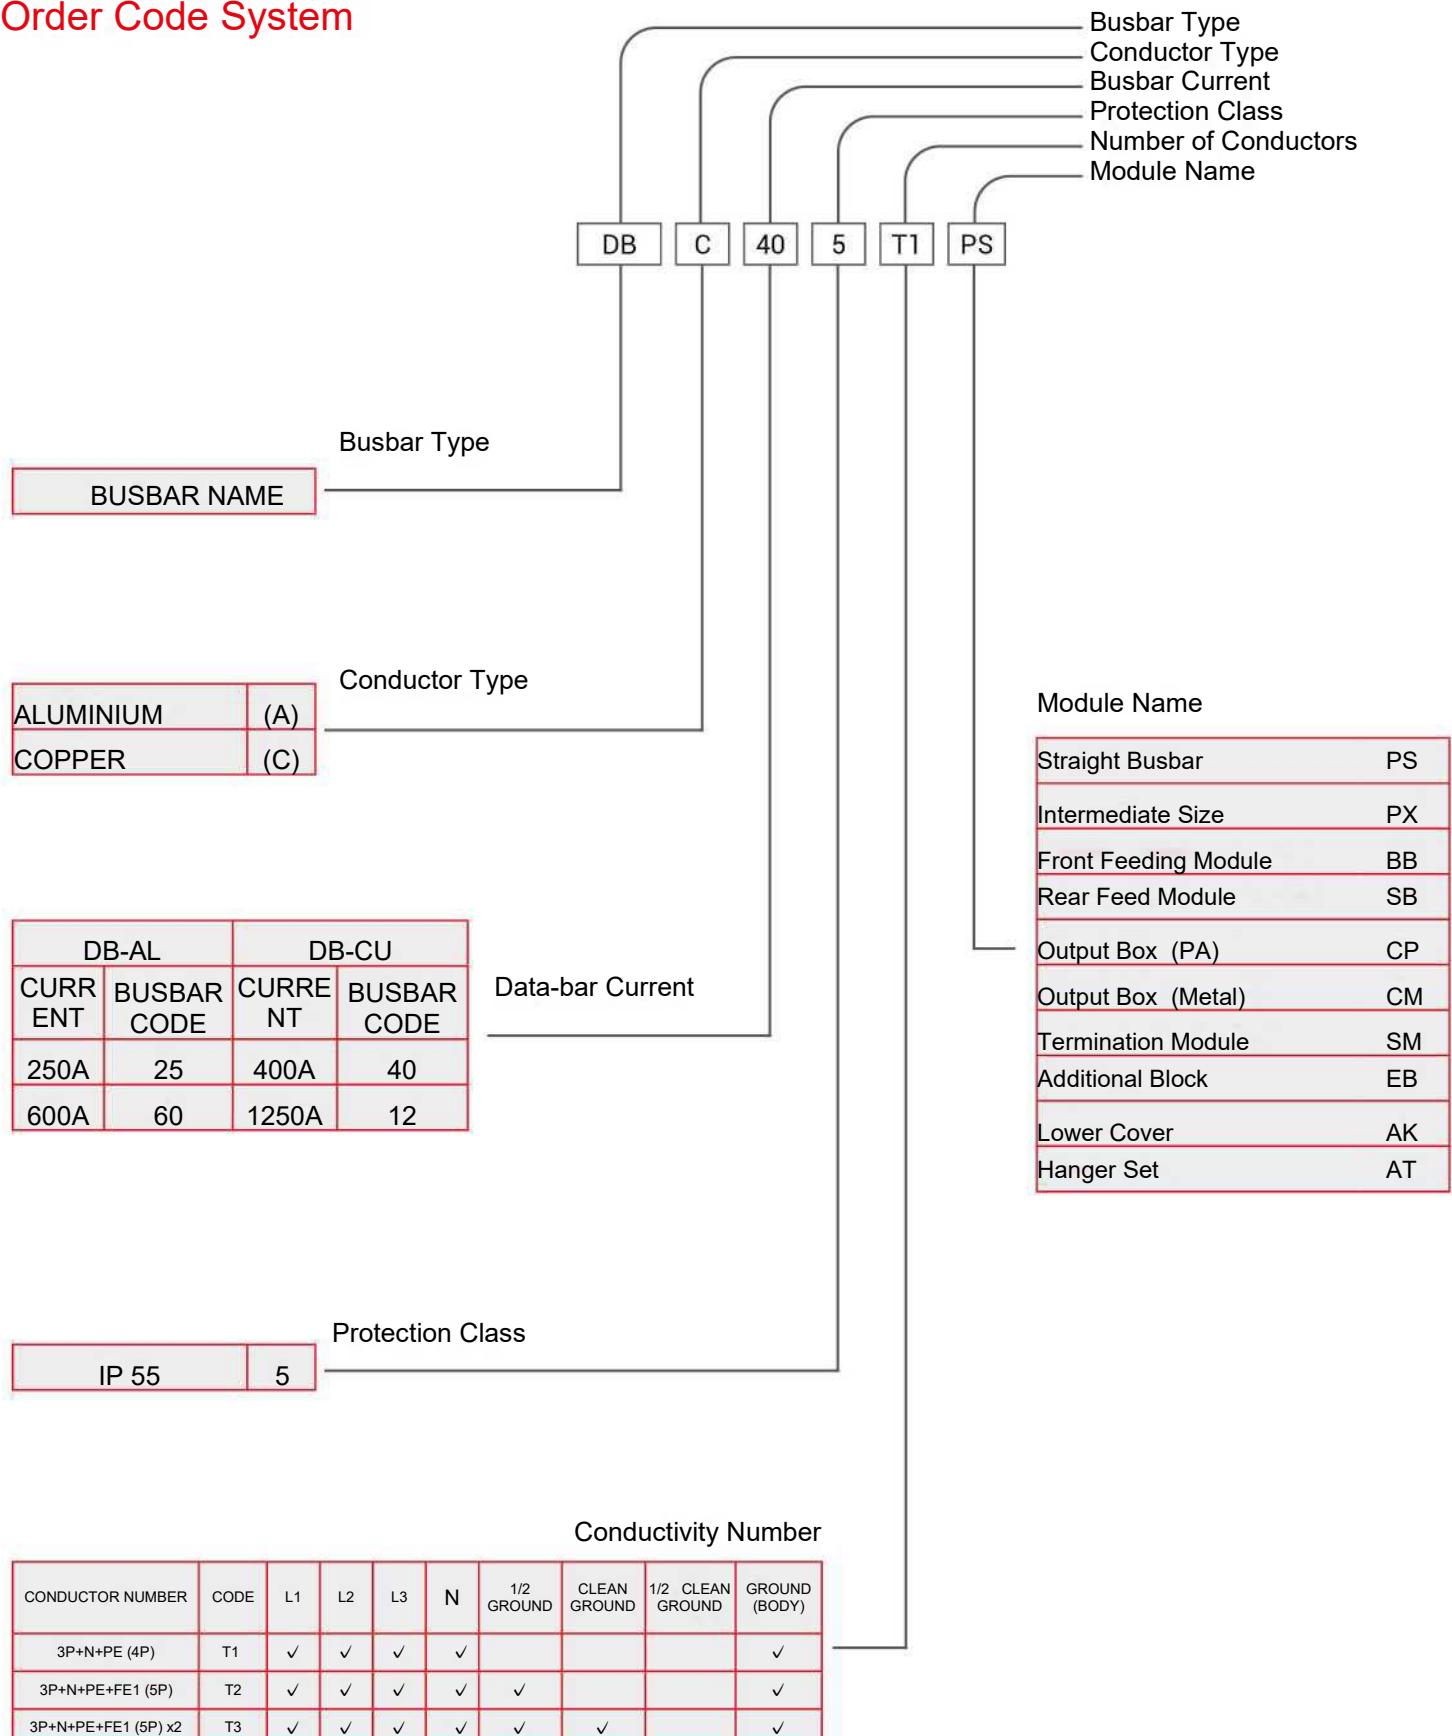


Hardware

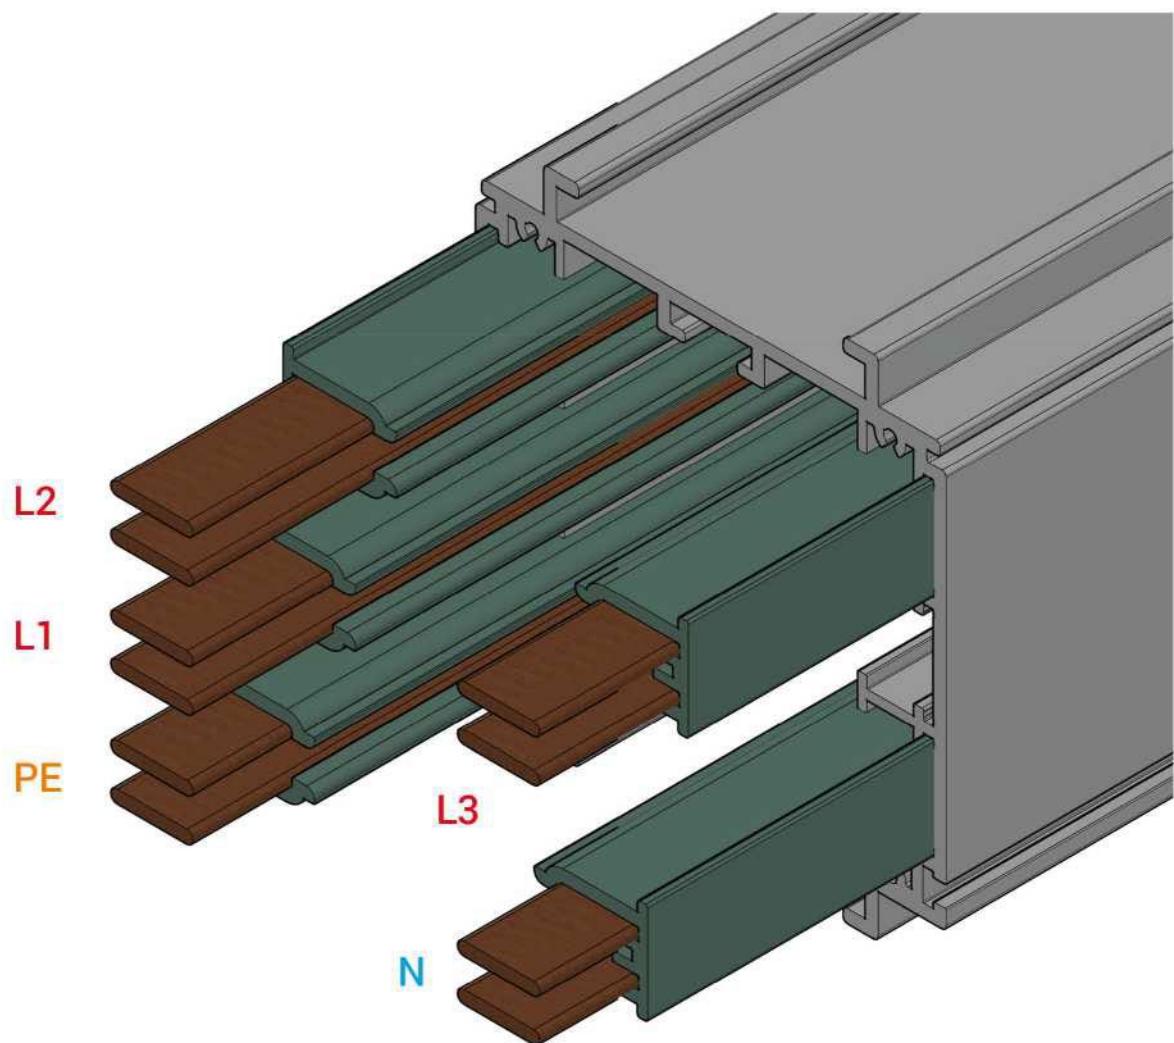

CU				
AMR	W	X	CONDUCTOR	
400A	115	103	2,5	20
1250A	185	103	2,5	55

AL				
AMR	W	X	CONDUCTOR	
250A	115	103	2,5	20
600A	185	103	2,5	55

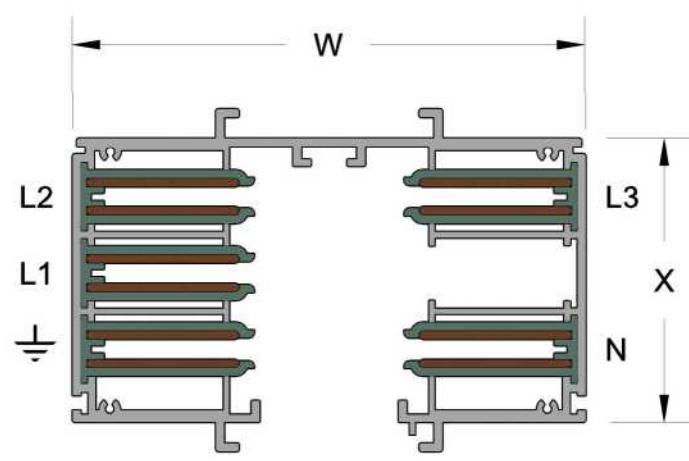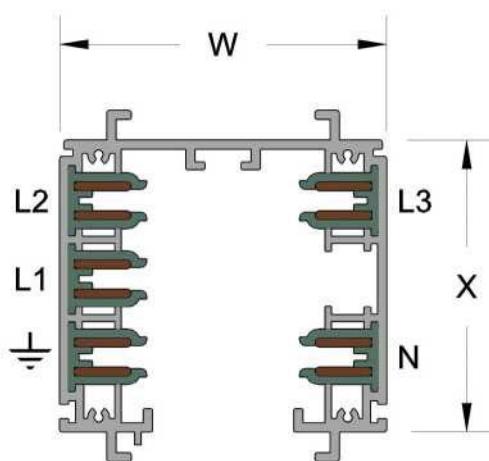


DATA RACK BUSBAR




Standard Size

PS
PX

SAMPLE ORDER
DBC405T1PS

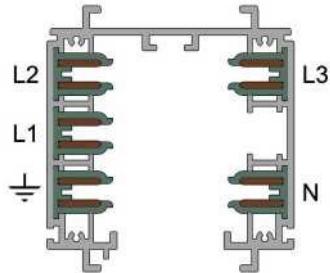


PRODUCT CODE	W	X
25	250A	AL
60	600A	AL
40	400A	CU
12	1250A	CU

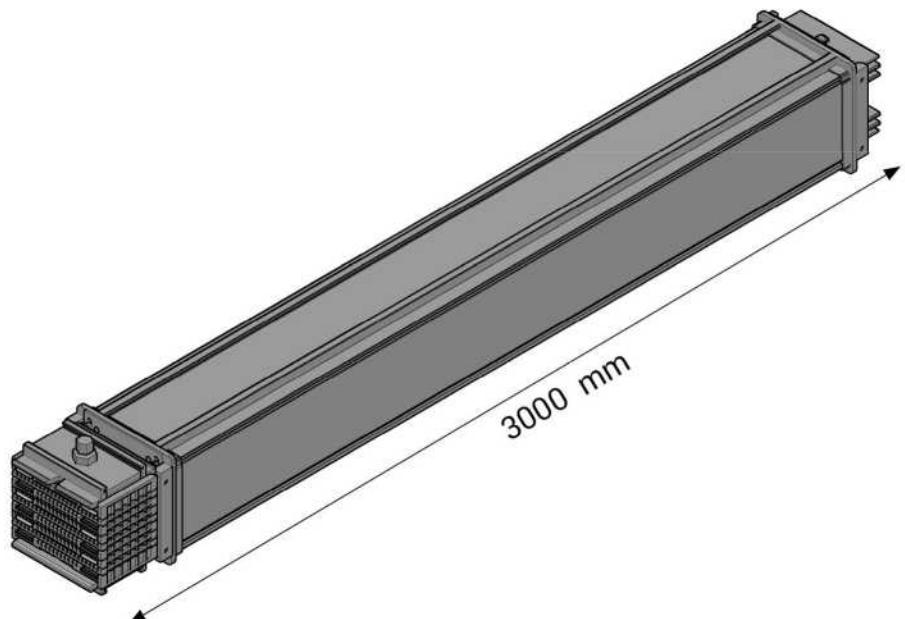



Front Feeding

BB

SAMPLE ORDER
DBC405T1BB

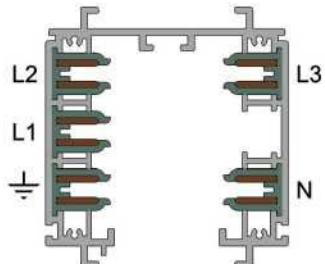

AMR	L mm	X mm	H mm
400A	303	225	350
1250A	303	295	350

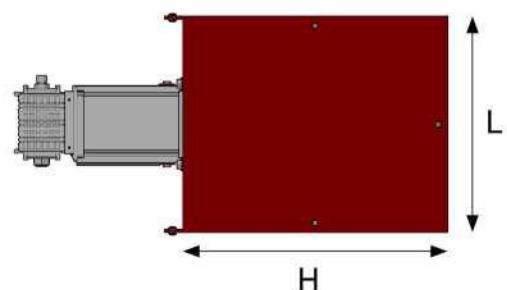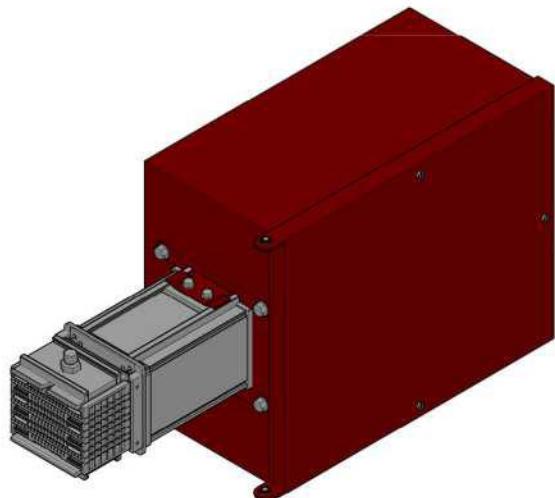

DATA RACK BUSBAR







Output Box
PA Plastic

CP

SAMPLE ORDER
DBC405T1CP


PRO. CODE	AMR	CONDUC TOR
25	250A	AL
60	600A	AL
40	400A	CU
12	1250A	CU

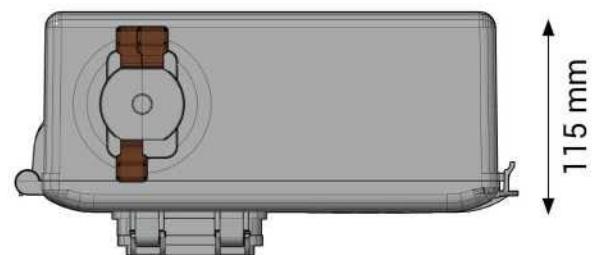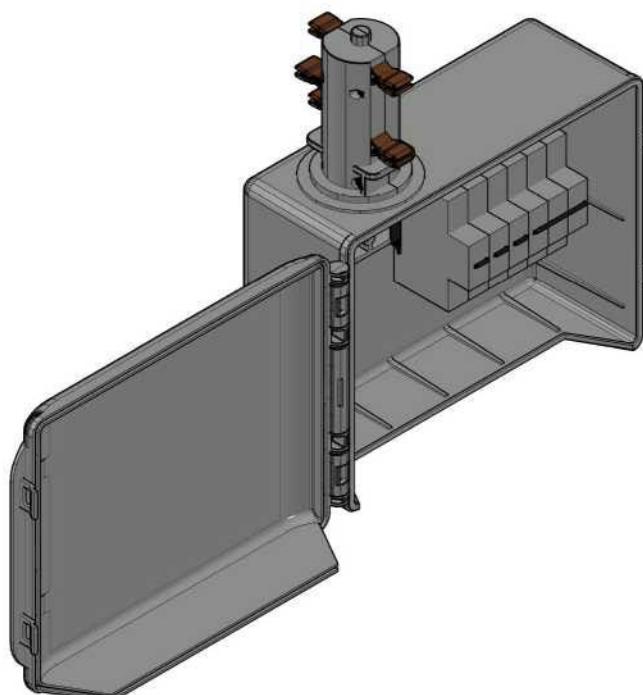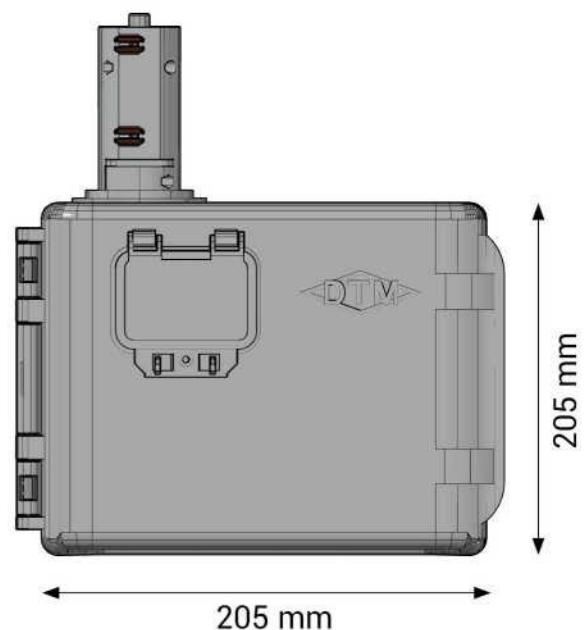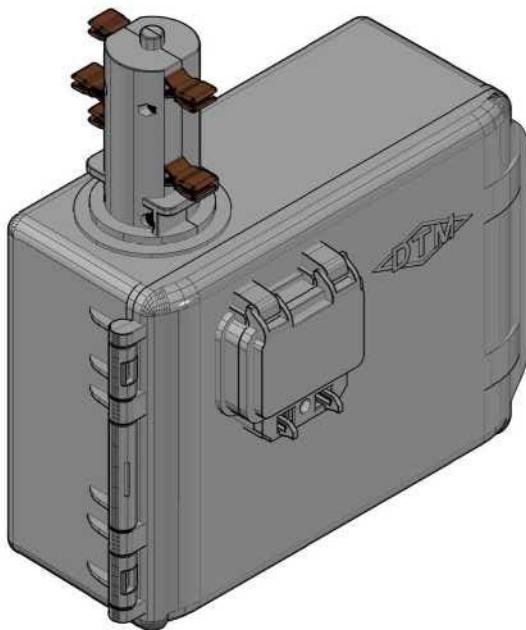

Output Box
Metal



CM

SAMPLE ORDER
DBC636T1CM

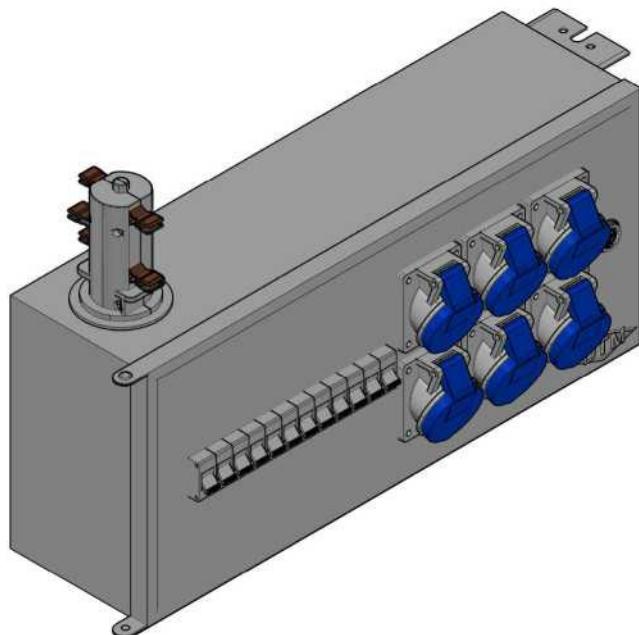

63A There are a maximum of six sockets available.


PRO. CODE	AMR	SOCKET	SIZE WxHxD
16	16A	6	540x240x150
32	32A	6	540x240x150
63	63A	6	540x240x150

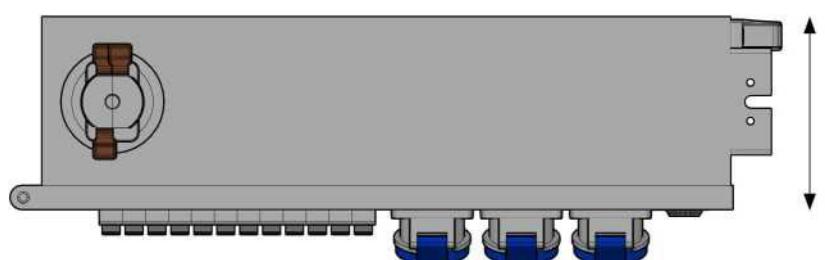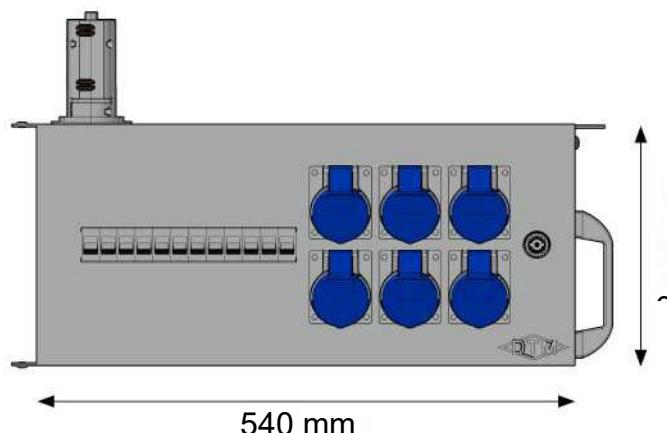

Output Box
Metal



CM

SAMPLE ORDER
DBC322T1CM

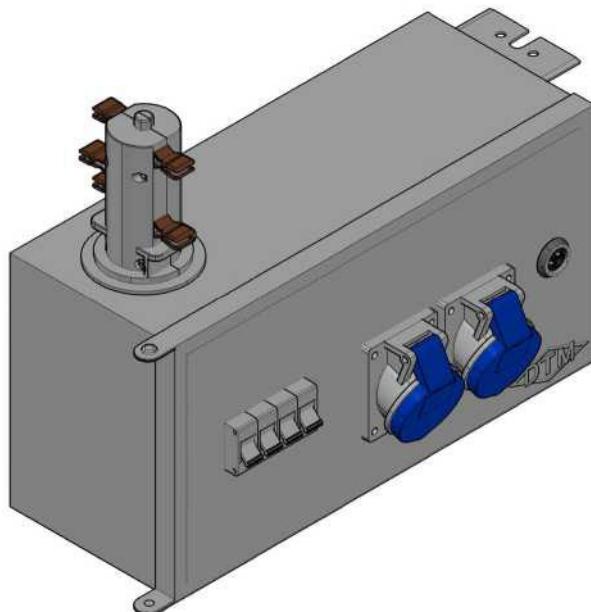

63A There are a maximum of two sockets available.


PRO. CODE	AMR	SOCKET	SIZE WxHxD
16	16A	2	380x200x150
32	32A	2	380x200x150
63	63A	2	380x200x150

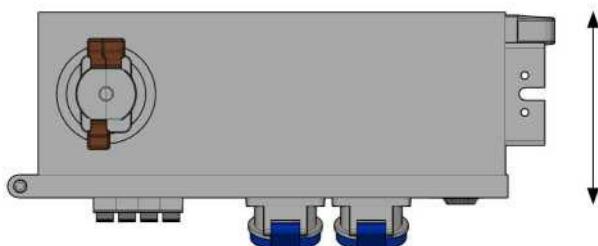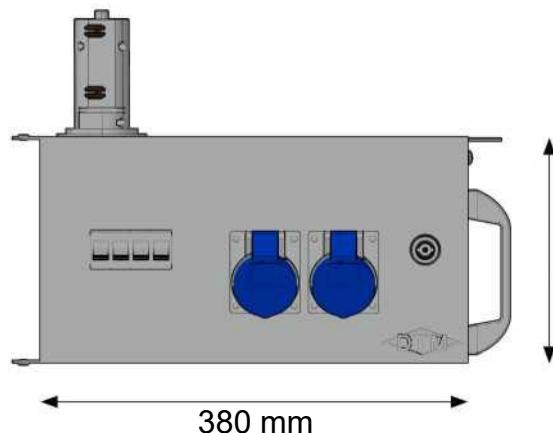

Metal Outlet
Box



CM

SAMPLE ORDER
DBC633T1CM

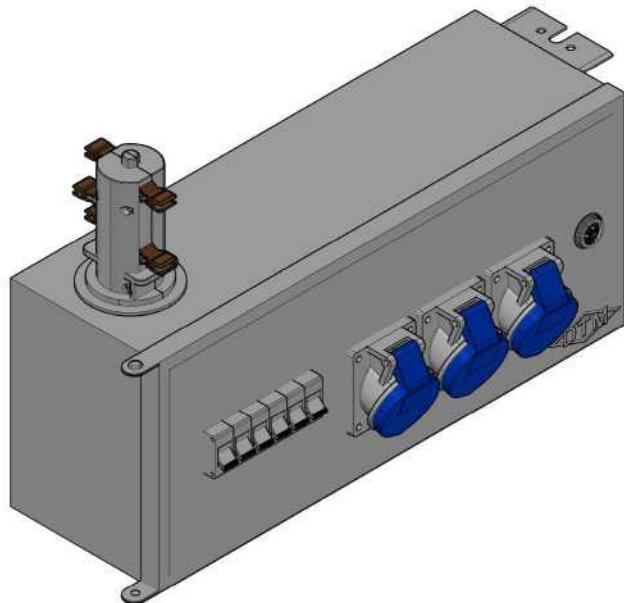

63A There are a maximum of three sockets available.

PRO. CODE	AMR	SOCKET	SIZE WxHxD
16	16A	3	470x200x150
32	32A	3	470x200x150
63	63A	3	470x200x150


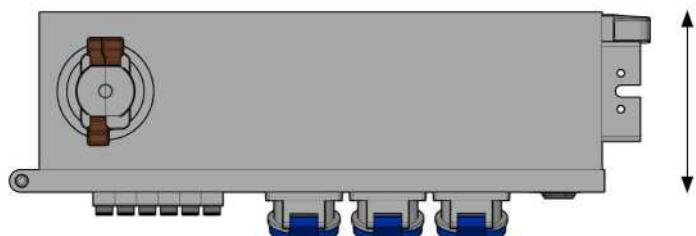
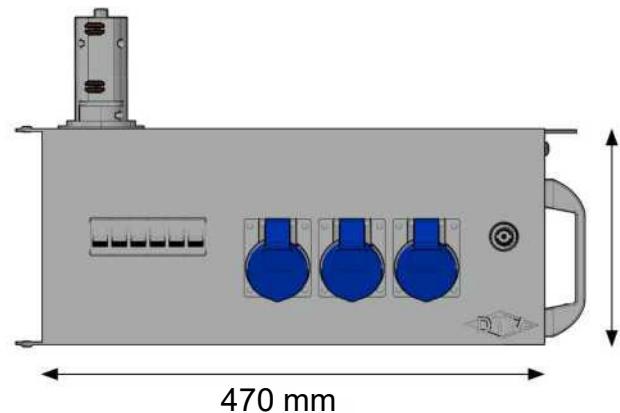


Termination
Module

SM

SAMPLE ORDER
DBC405T1SM

Used to terminate a line.

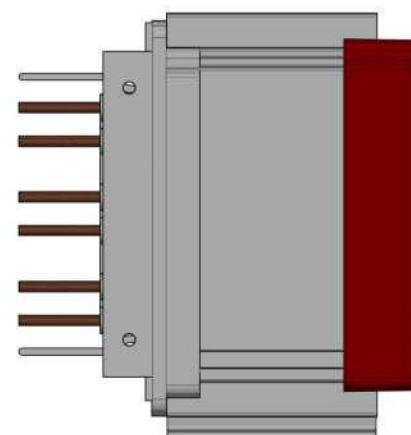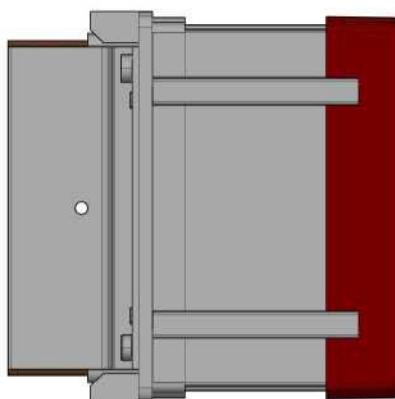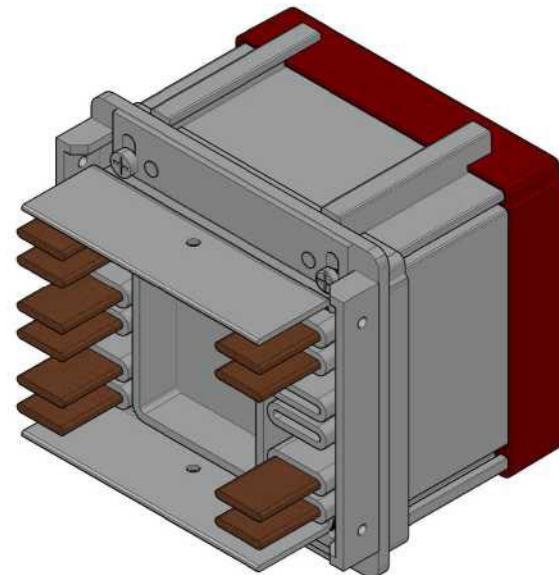


Closing

AK

SAMPLE ORDER
DBC405T1AK

It is used to close sections
for which a data-bar exit
has not been obtained.

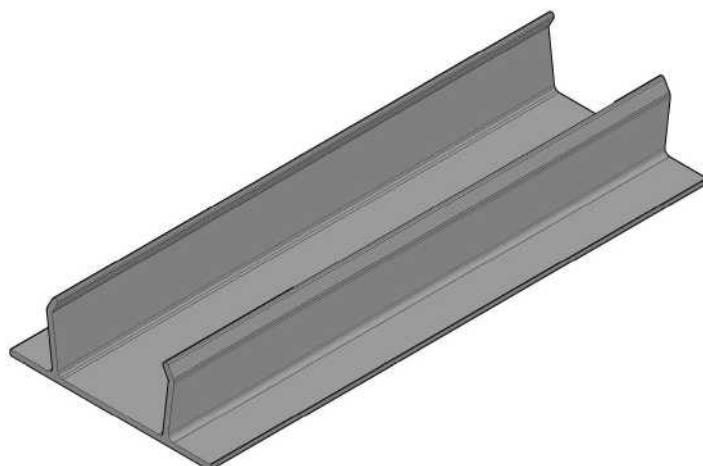


Hanger Set

AT


SAMPLE ORDER
DBC405T1AT

The data bar is used to hang at
1500 mm intervals horizontally.

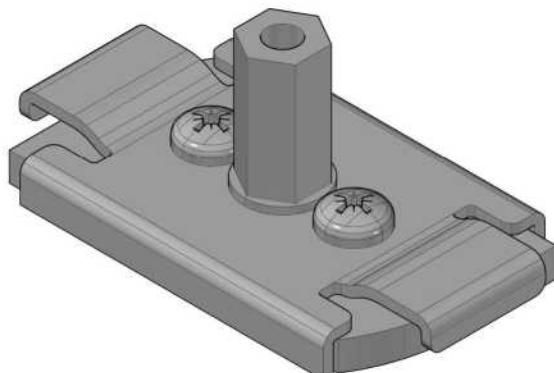


Connecting Elements

M8 Threaded rod hanger
W=500-L 000 mm

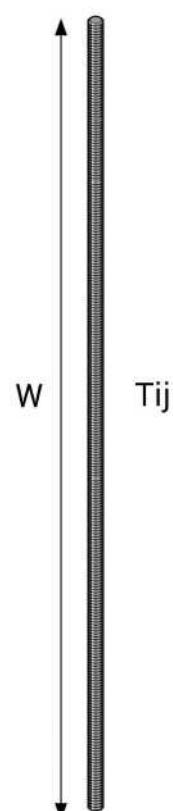


Additional connection

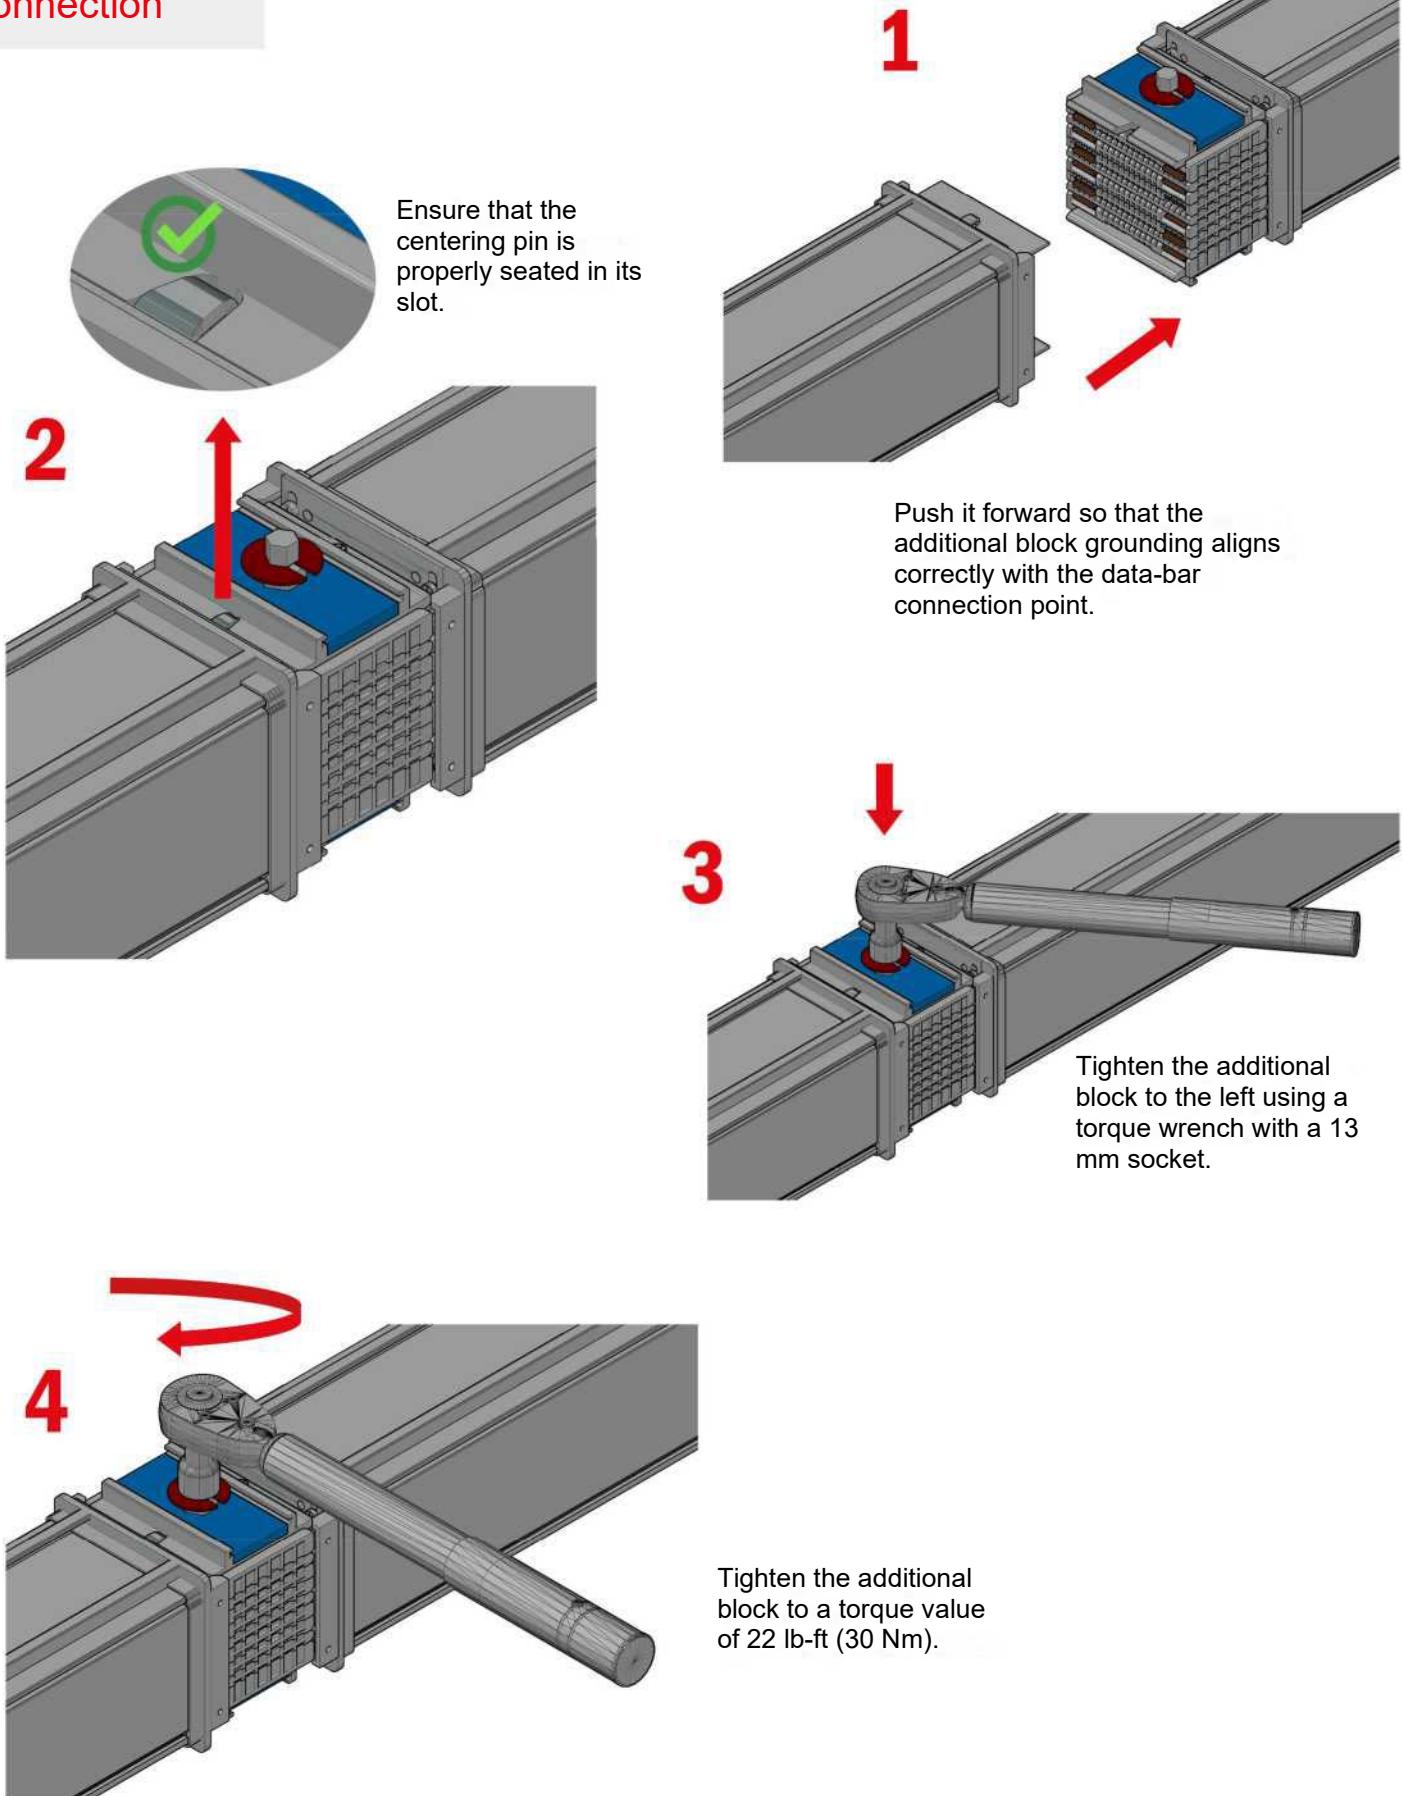


Additional connection

When the specified torque value is reached, the screw head tightened with a torque wrench will shear off.

5

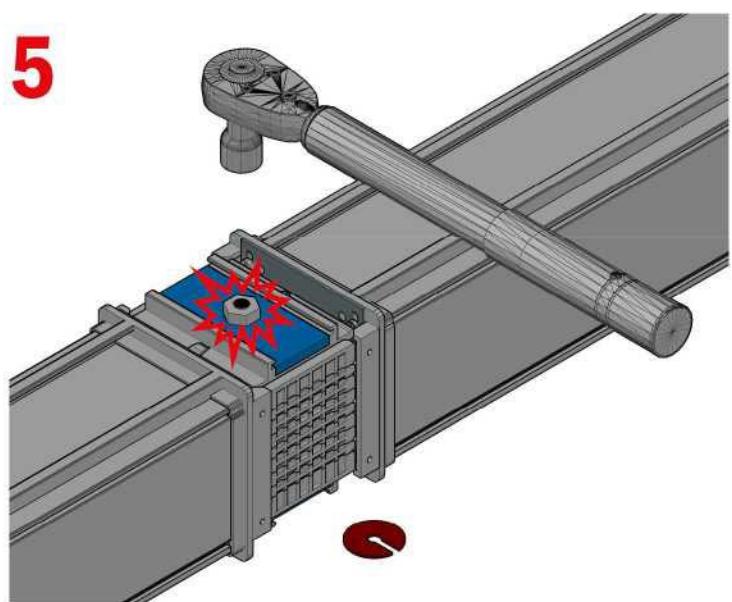


6

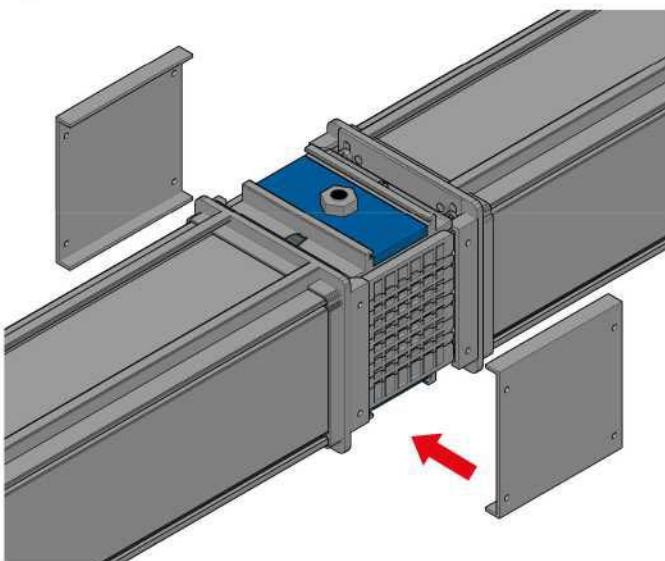


Install the additional covers that will enclose both sides of the additional block.

7

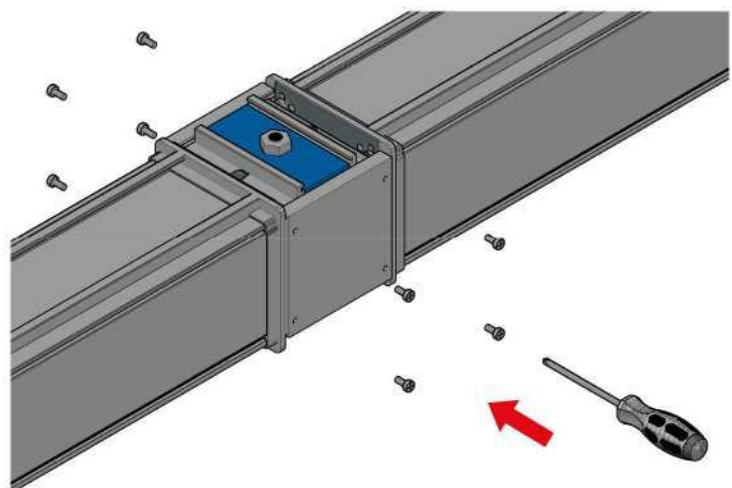


8

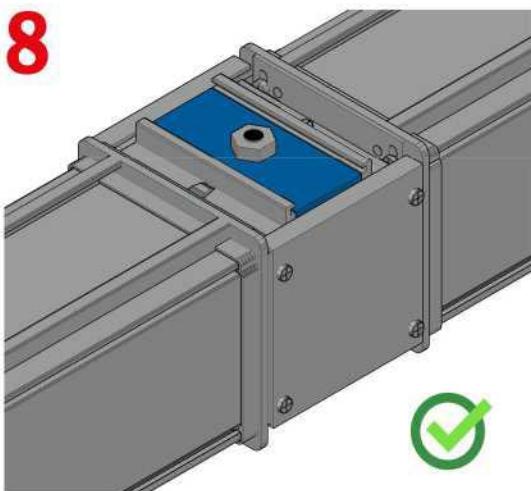


Tighten the additional covers using screws with a screwdriver.



Output Box Installation

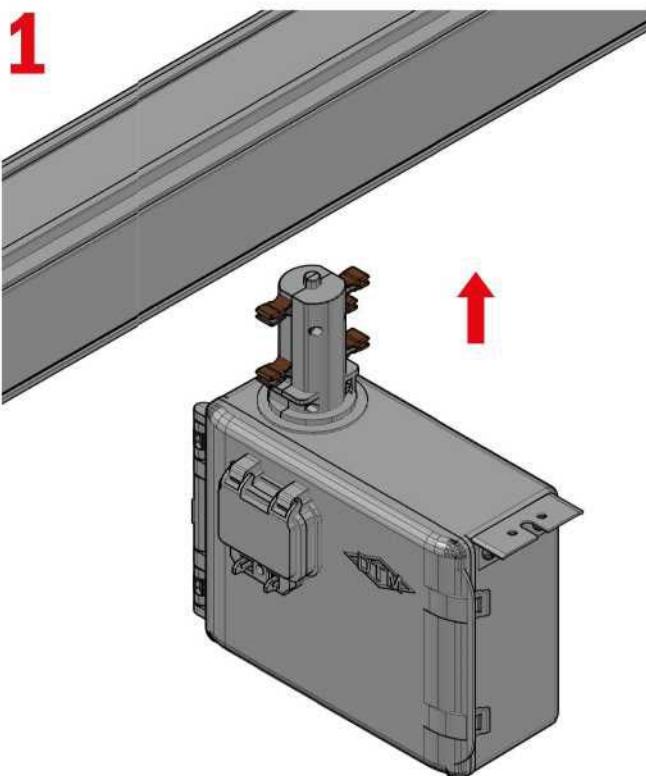

Install the data-bar outlet box upward in a position parallel to the busbar trunking.

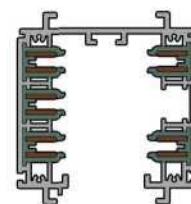


2

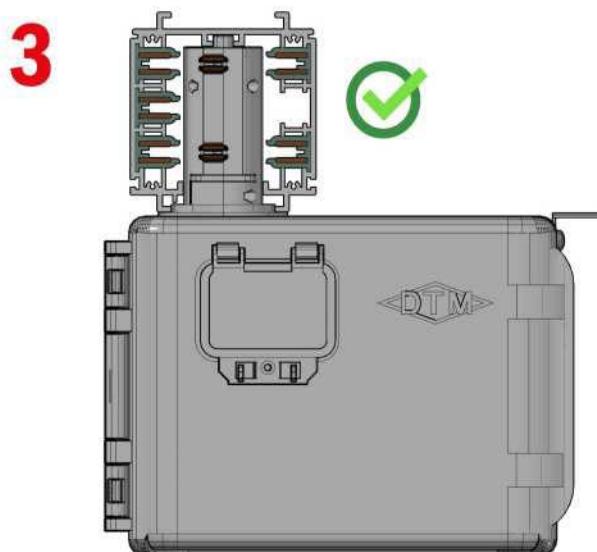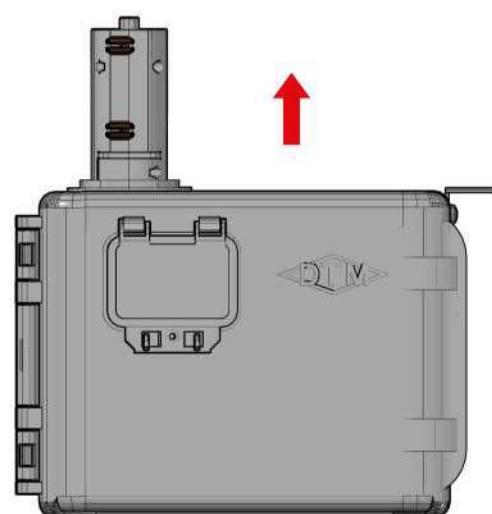


Ensure that the output box is fully seated in the channel.

After the outlet box is fully seated in the channel, rotate the box 90° to the right.

Output Box Installation

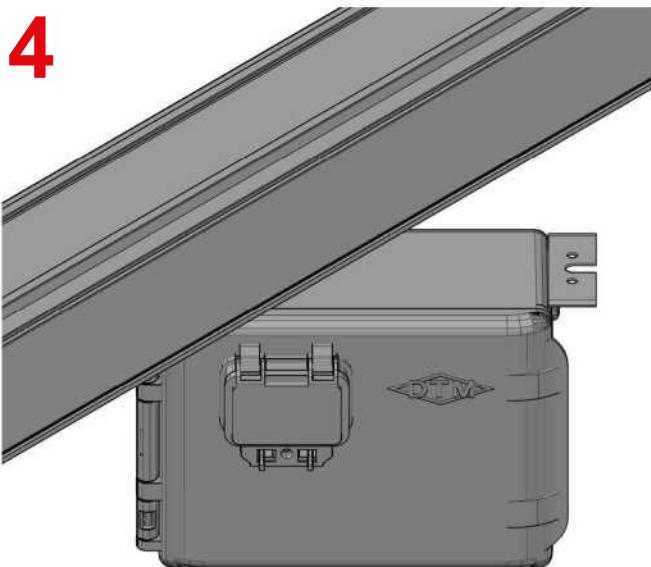


Rotate the outlet box 90° to the right.

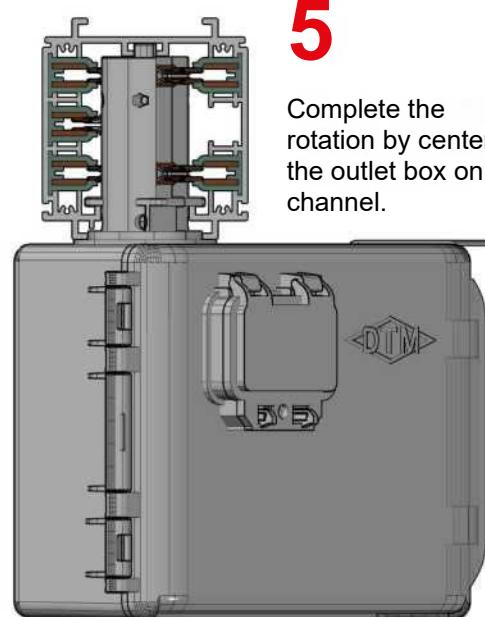

5

Complete the rotation by centering the outlet box on the channel.

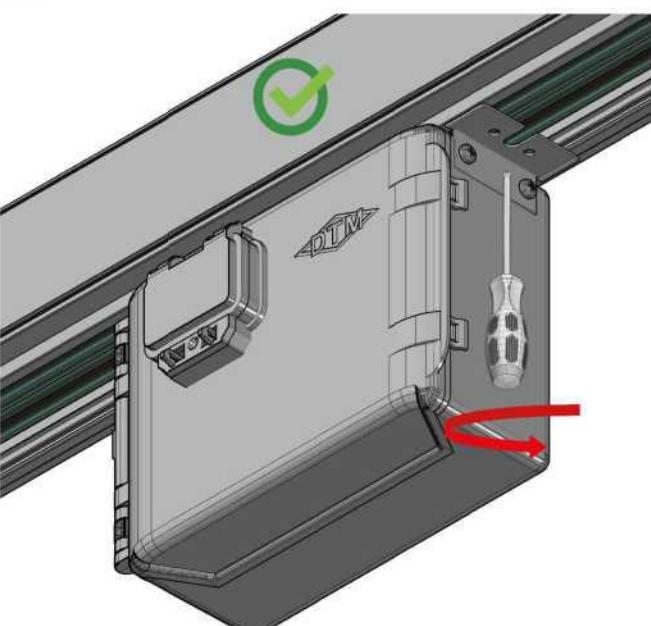


6


Align it with the mounting holes inside the channel and tighten using a screwdriver.

7

Complete the rotation by centering the outlet box on the channel.


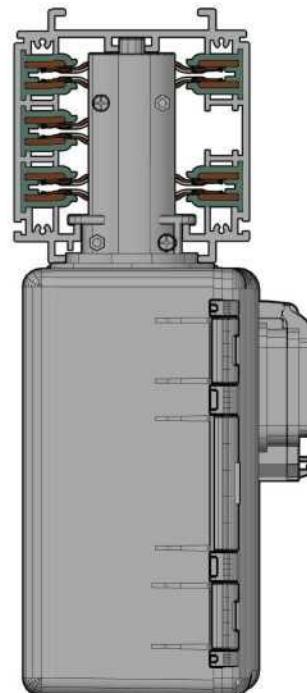


Output Box Installation

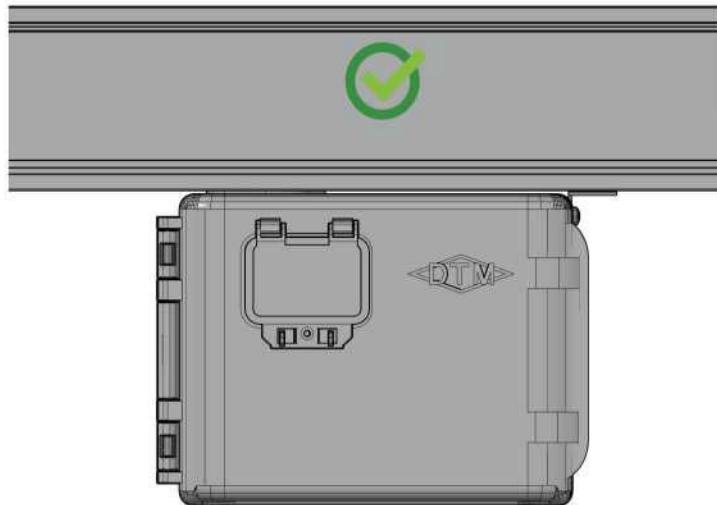

8 The output box installation is complete.

10 Use a cover to close the channel gap.

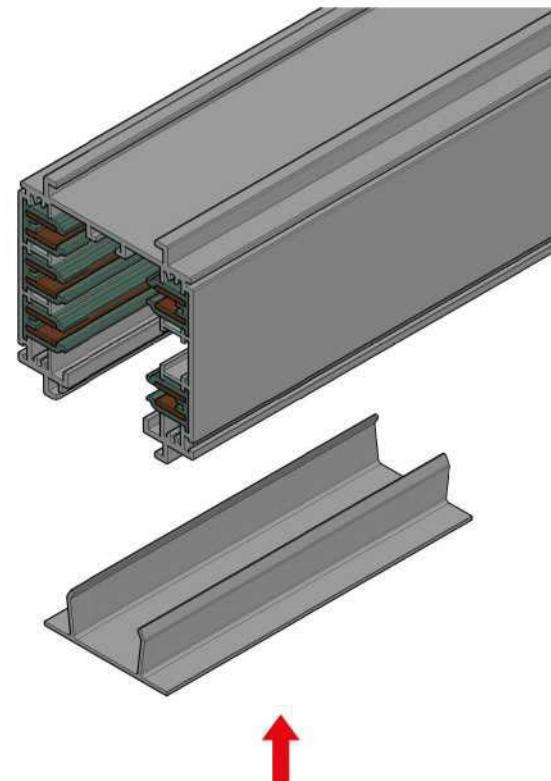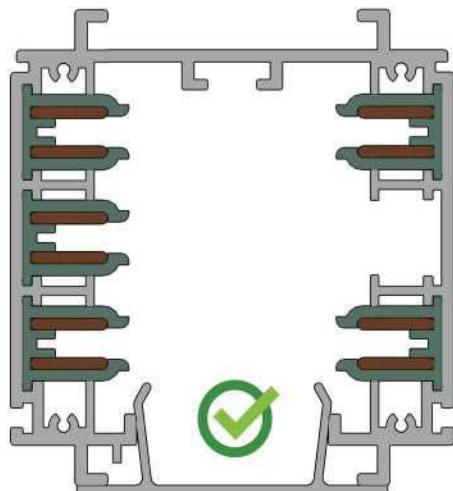



DTM ELEKTROTEKNIK SANAYI VE TIC. A.S.

📍 Yalova O.S.B. Fikri İşık Cad. No: 18/1
Çiftlikkoy - YALOVA / TURKIYE

📞 0216 429 51 74
📞 0532 646 86 44
📠 0216 429 47 88

✉️ info@dtmbusbar.com
🌐 www.dtmbusbar.com

DTM Elektroteknik reserves the right to make technical changes or to modify the content of this document without prior notice. The specifications mutually agreed upon in purchase orders shall prevail. DTM shall not assume any liability for possible errors or omissions in this document.

We reserve all copyrights related to this document and to the images used herein. Any reproduction, use by third parties, or utilization of the content—in whole or in part—without the prior written consent of DTM is strictly prohibited.

©Copyright 2025 DTM
All rights reserved.