




## ► Çıkış Kutusu Montaj Şekli

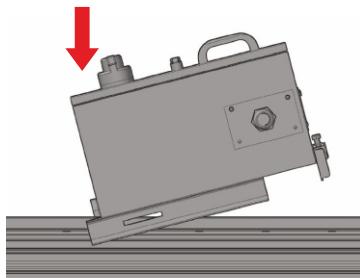


**1** Kutu montaj edilirken çıkış kutusunun alt giriş kısmındaki kancaya dikkat ederek gövdeye montaj ediniz.

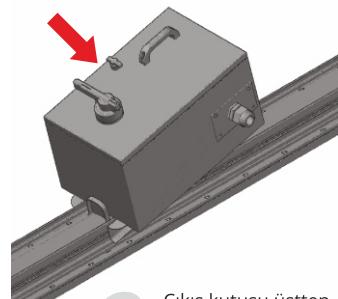


**2** Çıkış kutusu üstten bastırılarak busbar'a oturması sağlanır.

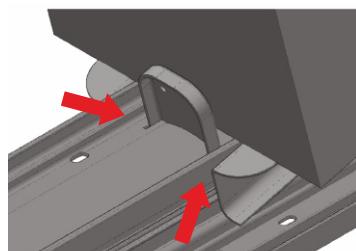


**3** Çıkış kutusunun busbar gövdesine kanca sistemi yardımıyla takılmasını kontrol ediniz.

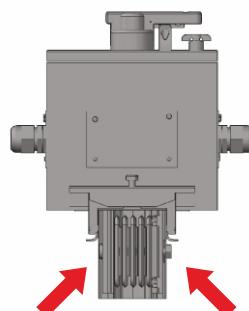

**4** Kutusunun busbar gövdesine kelepçe sistemi yardımıyla vidalanarak montaji sağlarıń.

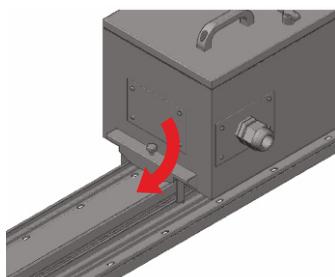


**5** Kelepçe sıkılarak gövdeye sabitlenir.

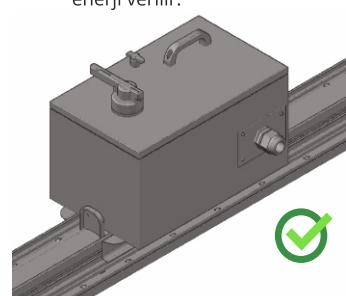


NOT: Emniyet nedeniyle (ON) onumunda kutu kapağı mekanizma nedeniyle açılmasını engellenir.

► Özel ölçüdeki modüller için lütfen firmamızı arayınız.


## ► Tap-Off Unit Installation

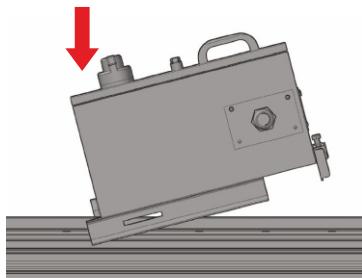

- 1** Attach the tap-off unit to the housing, paying attention to the hook on the bottom opening of the tap-off unit.

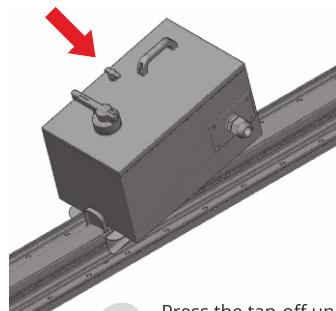


- 2** Press the tap-off unit down so that it fits into the busbar.

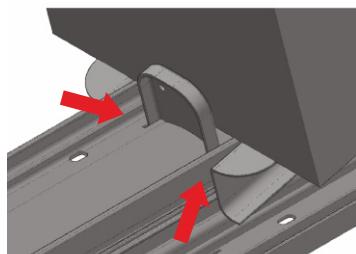


- 3** Check to see if the tap-off unit is hooked up to the busbar housing.


- 6** Turn on the tap-off unit by means of the special mechanism.  
Cover the tap-off unit when the mechanism is OFF and power up when it is ON.

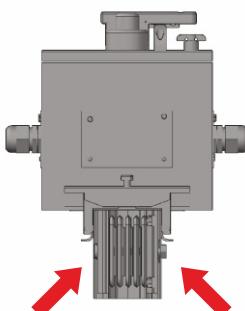

- 4** Screw the tap-off unit onto the busbar housing with the help of the clamping system.

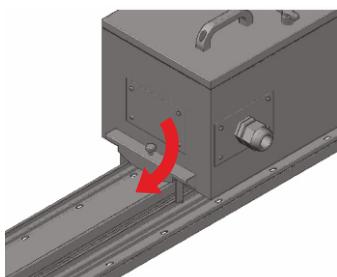

- 5** Tighten the clamp to fix the unit on the housing.

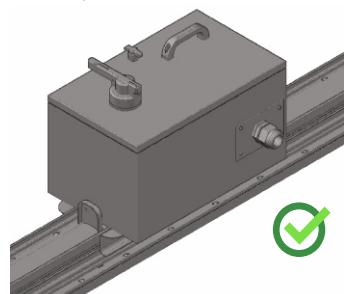

NOTE: For safety reasons, when the mechanism is ON, the tap-off unit cannot be uncovered.

► Please contact us for custom-length modules.